




LECTURE HALL AV CONTROL SYSTEM OPERATION MANUAL

INDEX


OVERVIEW		3
CONNECTORS		5
SOURCE		6
HDMI		7
VISUALIZER		8
BLU-RAY		9
CONTROL		10
MEDIA VOLUME		11
MICROPHONE VOLUME		12
PROJECTOR CONTROL		13
ENVIRONMENT		14
SCREEN		15
LIGHTING		16
CURTAIN		17
OPERATION VOICE CAPTURE		18
OPERATION SOUND OUTPUT		19
OPERATION VISUALIZER		21
CONTACT US		23

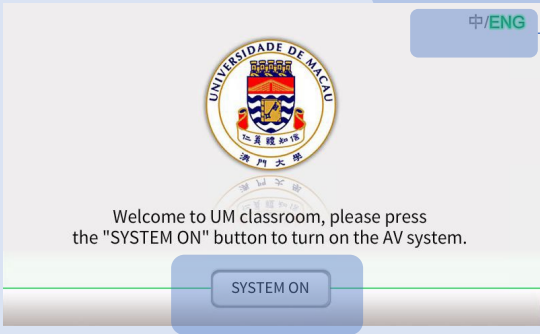

Switch language
CHINESE / ENGLISH

Press the “SYSTEM ON”
button and the system
will turn on in 5 seconds

Extendable button

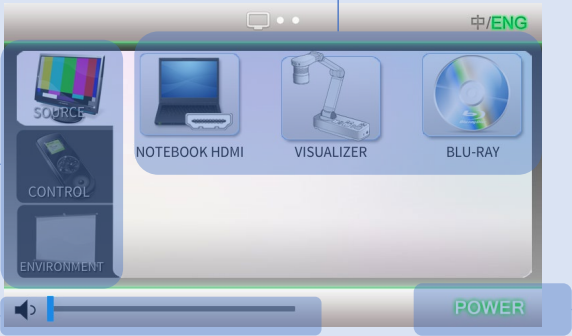


POWER OFF

Media volume bar

Navigation Tab

Navigation Tab contains 3 pages:
SOURCE, CONTROL and ENVIRONMENT.


SOURCE

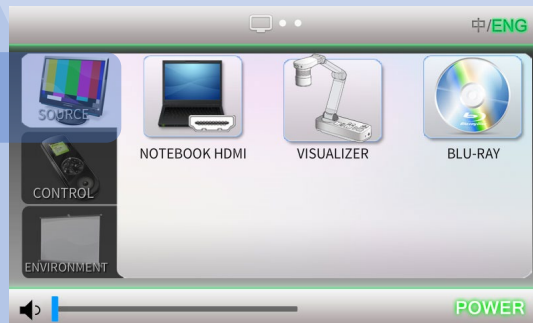


CONTROL




ENVIRONMENT

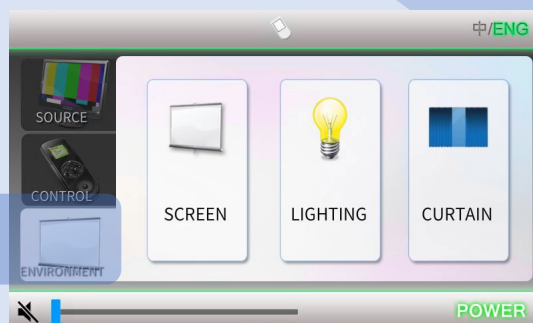



Difference cables are located on the teaching desk.

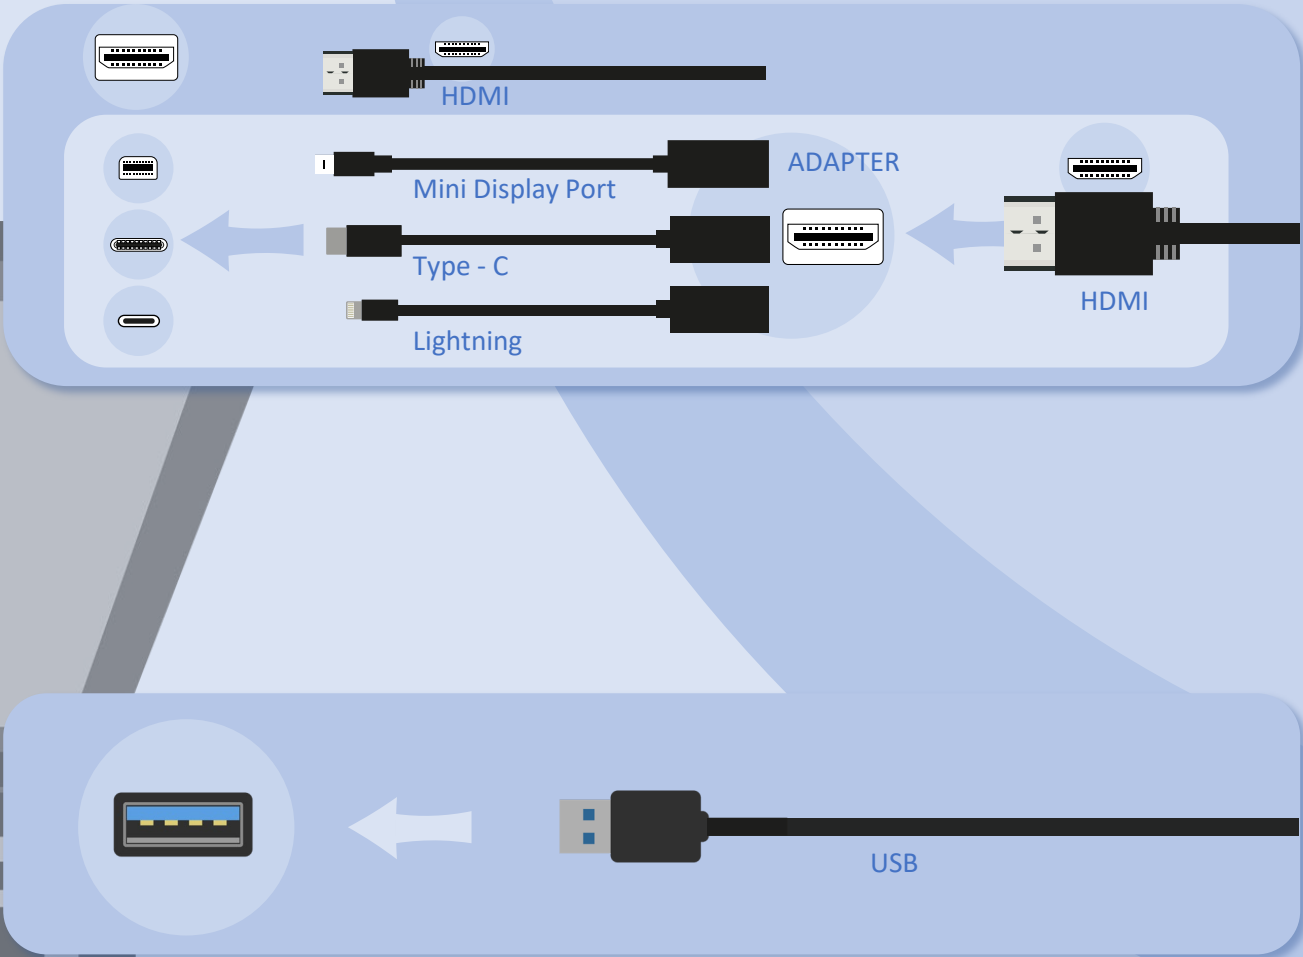

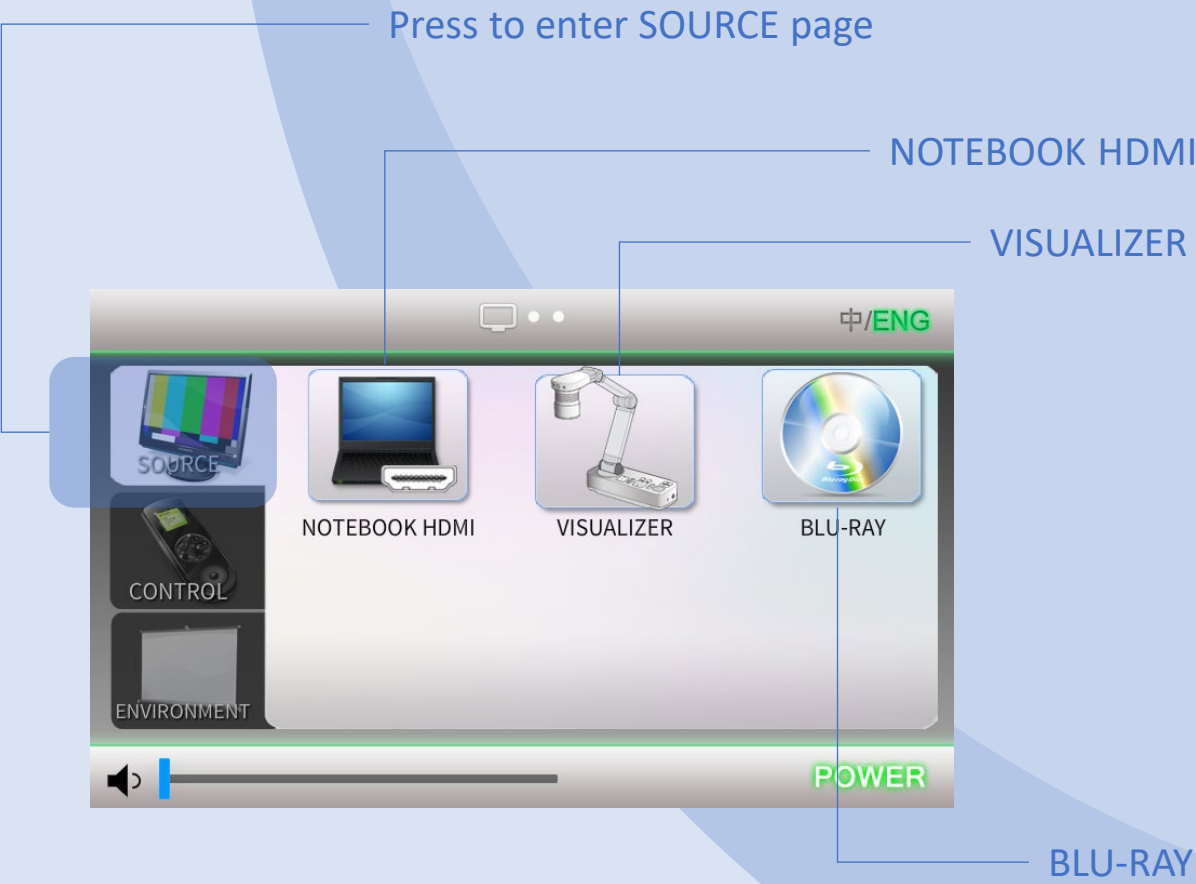



Connect the HDMI cable on the desk to notebook. Or connect with the adaptor as below instruction.

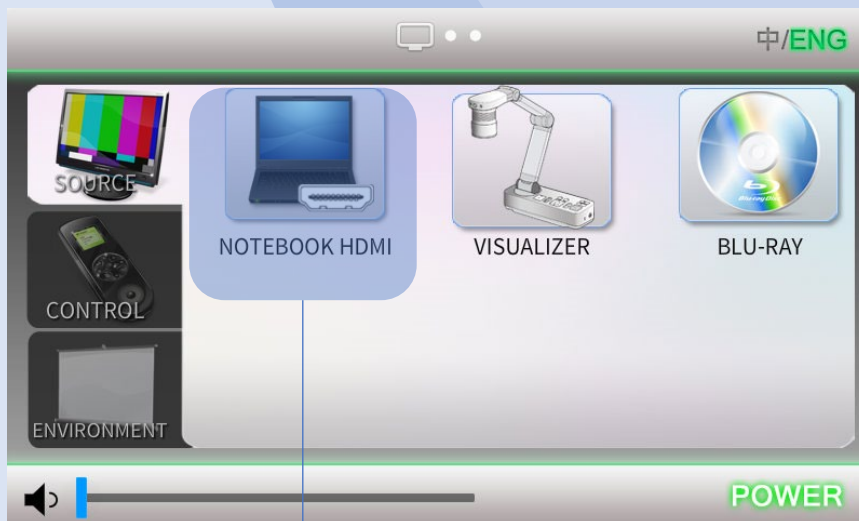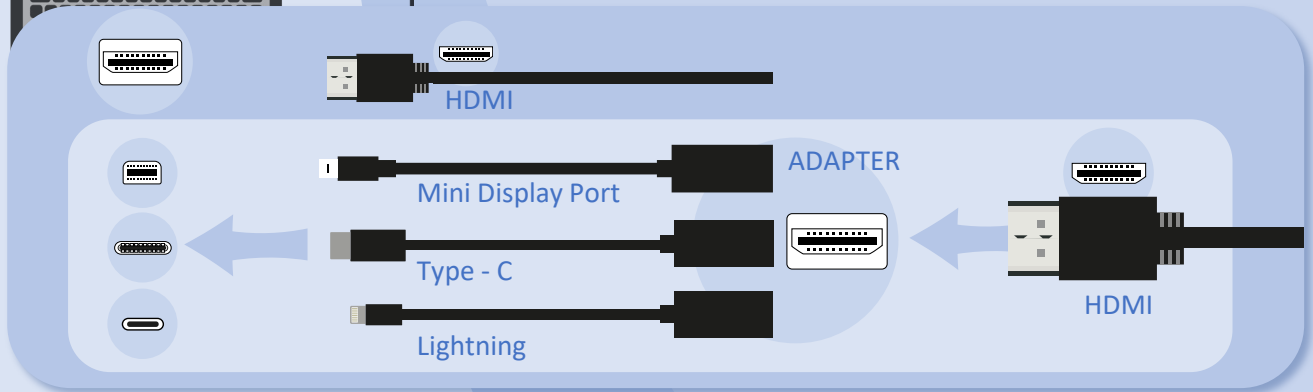

Press the NOTEBOOK HDMI button.


If projectors have no signal. Press the appropriate function keys on your notebook for image output.

The function keys locate among F1 – F12, on which there is a monitor icon or the words “LCD”.




Or press the function keys “Window key + P” to launch the image.



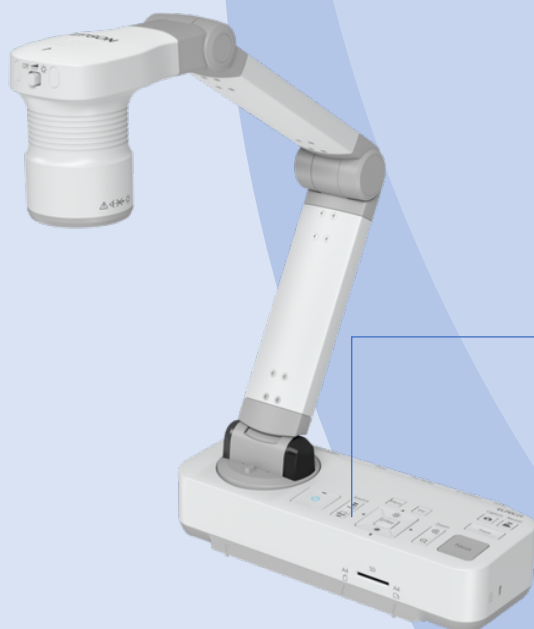

Turn on the visualizer by pressing the "ON/OFF" button.

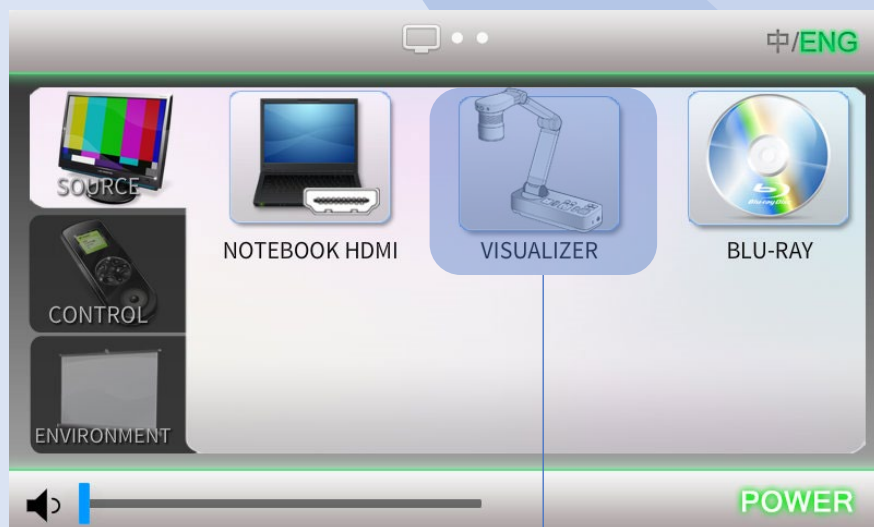


Press the VISUALIZER button.



Turn on the BLU-RAY player by pressing the “ON/STANDBY” button.

Press  button to open or close disk tray.

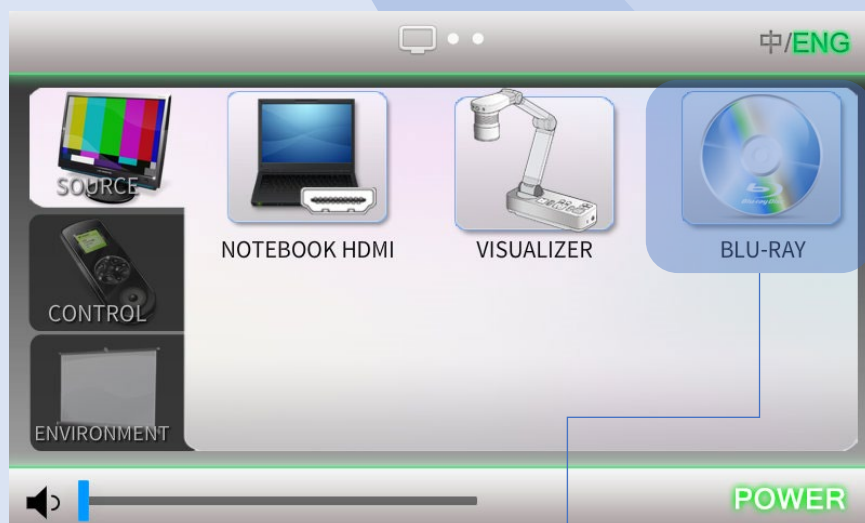

Press the BLU-RAY button.

Control Page contains 3 control functions:
MEDIA VOLUME, MICROPHONE VOLUME and
PROJECTOR CONTROL.




Press to enter CONTROL page.

MEDIA VOLUME control: Notebook and BLU-RAY PLAYER.




Press the MEDIA VOLUME button.

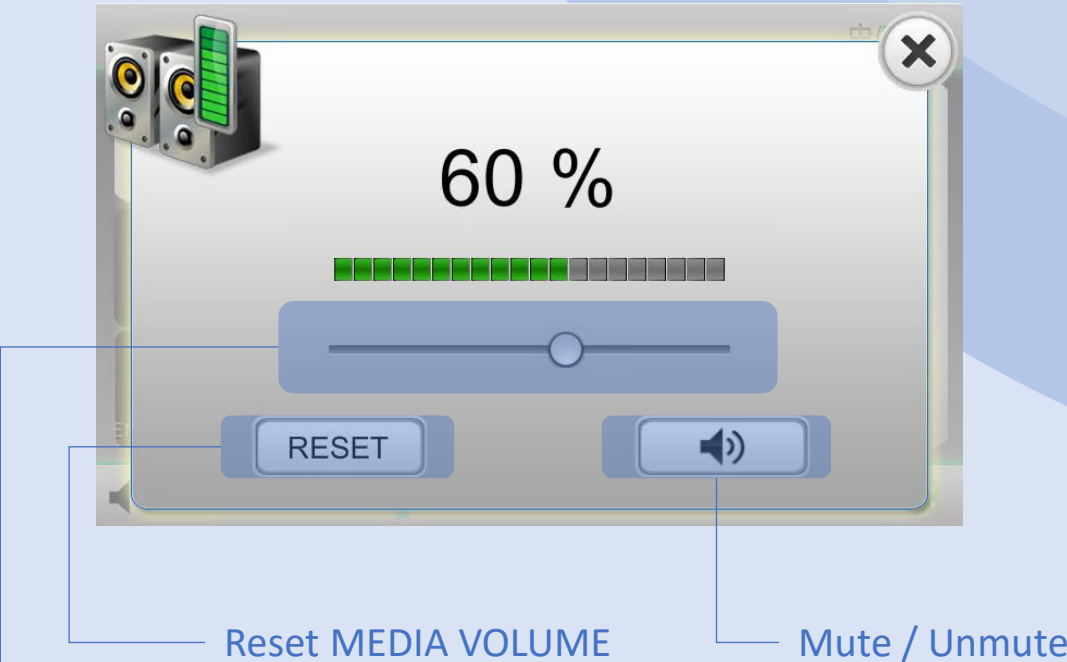

“CONTROL FADER” determines the level of media volume.



Press the MICROPHONE VOLUME button.


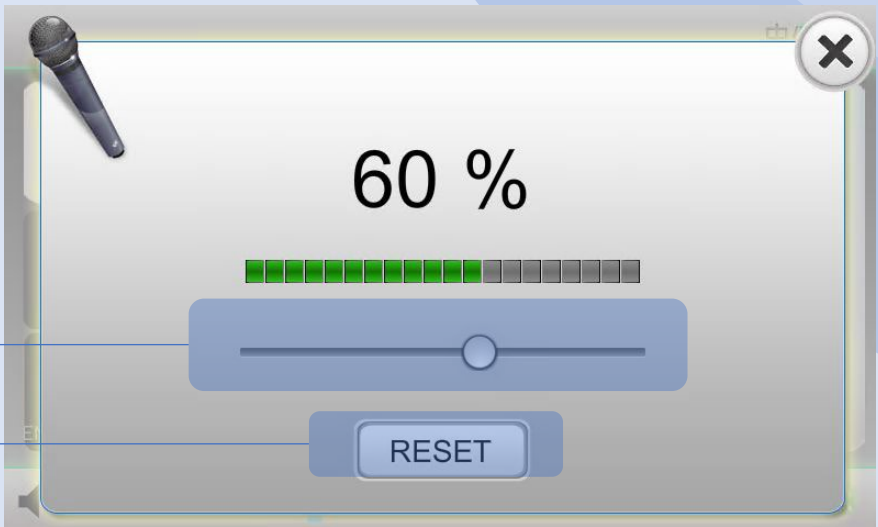


Reset MICROHPONE VOLUME


“CONTROL FADER” determines the level of microphone volume.




Press the PROJECTOR CONTROL button.

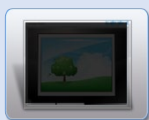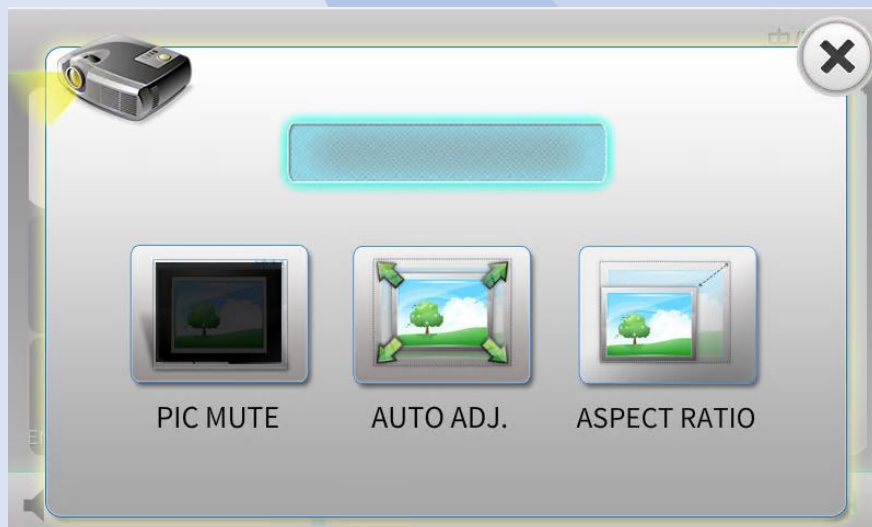

Mute/Unmute projector picture.

 


Auto adjust projector picture.

 

Change projector picture aspect ratio: 16:9, 4:3 and normal.

Environment page contains 3 control functions:
SCREEN, LIGHTING and CURTAIN.



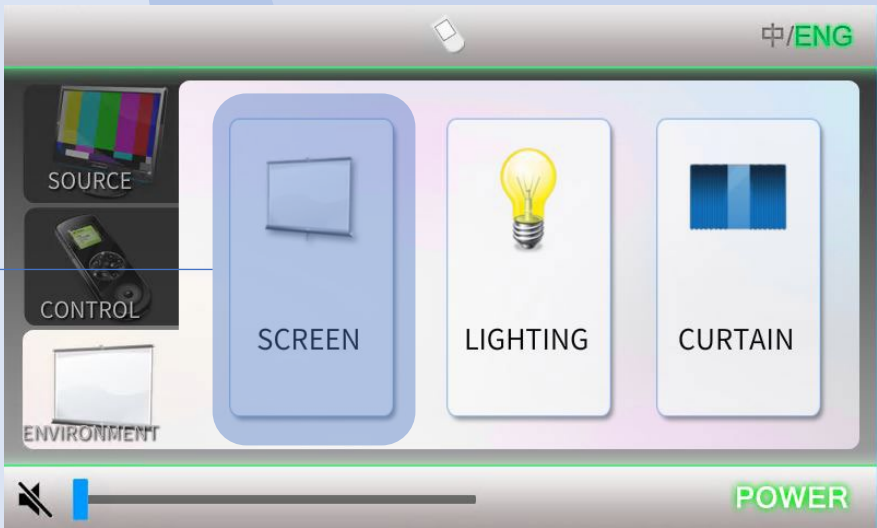


Press the SCREEN button.




Press appropriate button to select screen mode.

*Subject to the Lecture Hall design to provide.

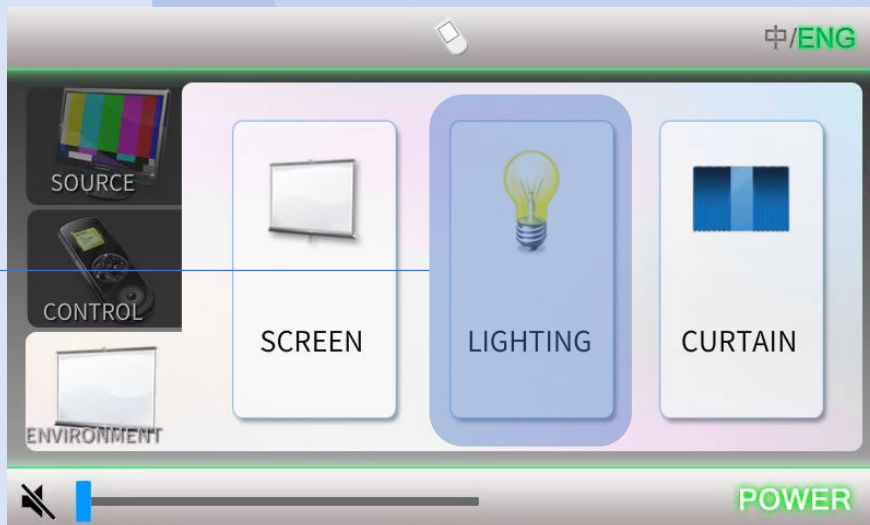


Press the LIGHTING button.

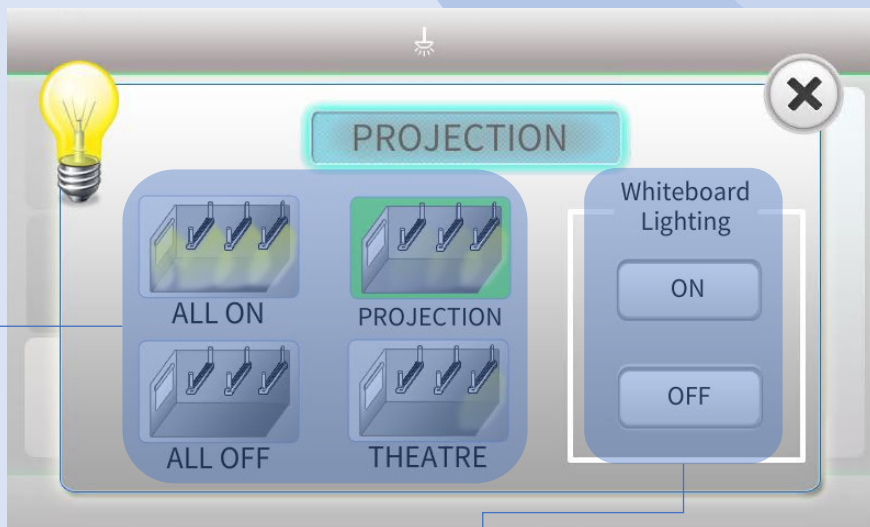


Whiteboard Lighting
ON/OFF

Press appropriate button to select
lighting mode.

*Subject to the Lecture Hall design to provide.

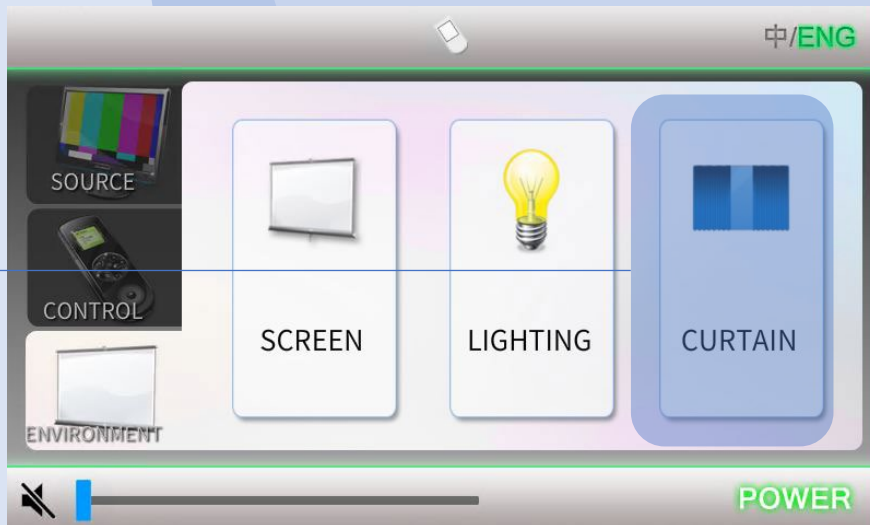

Press the CURTAIN button.

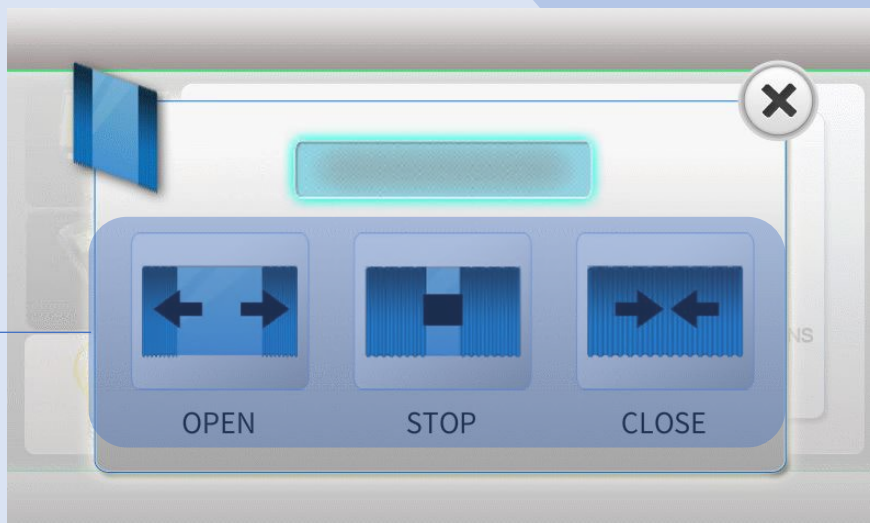

Press appropriate button to select curtain mode.

Use Classroom Microphone as Zoom Microphone for Voice Capture.

Connect UM wire network cable, HDMI cable and USB cable (labeled for Zoom, “Dante USB Receiver”) to your notebook.



HDMI



UM wire network cable




Dante USB



For video introduction, please click [HERE](#) or the below weblink for access.

<https://css.cmdo.um.edu.mo/audio-visual-services/>

Make sure your click “Join with Computer Audio” and join your audio to the meeting.

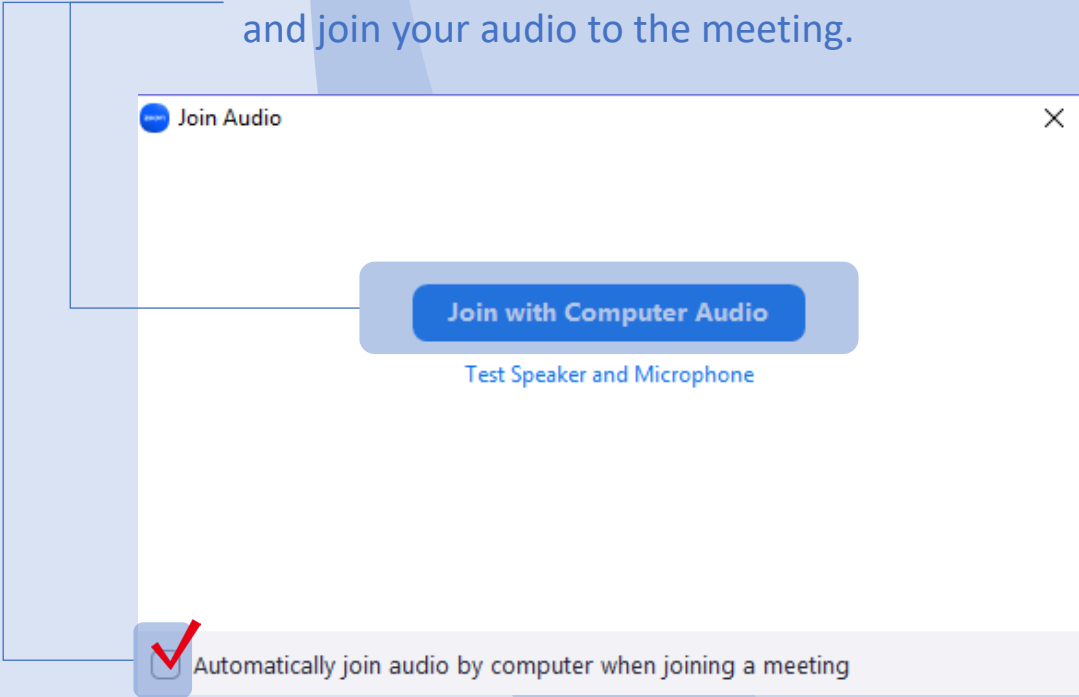


Click on the up arrow and select.

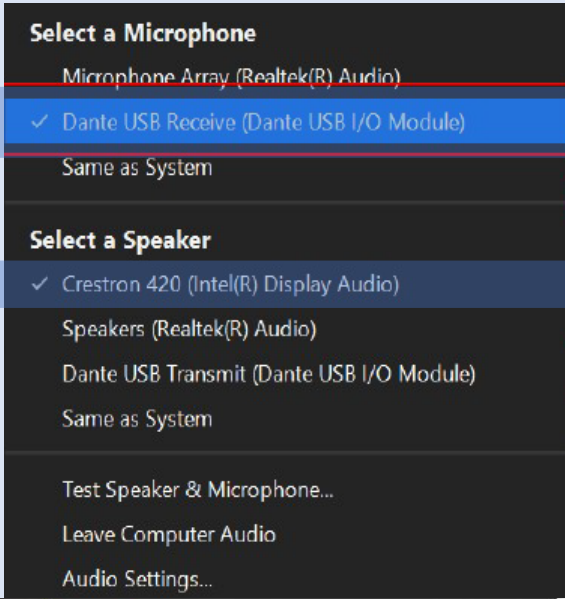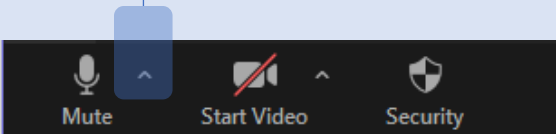


Select “Dante USB Receiver” as your microphone.

 Select “Crestron 420”, “Extron HDMI” or “VM-2HN” as your speaker.



Use HDMI cable for sound output from notebook to classroom AV system.

 Connect HDMI cable to your notebook.




HDMI


Click on sound volume icon at the bottom right corner of Window 10. A “select playback device” menu will pop up.




Select “Crestron”, “Extron HDMI” or “VM-2HN” as the playback device.

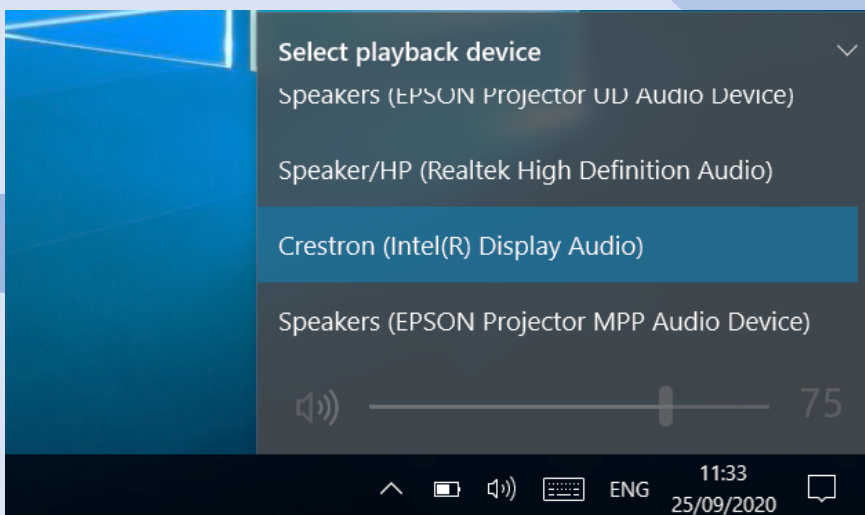

Turn on the visualizer by pressing the ON/OFF button.

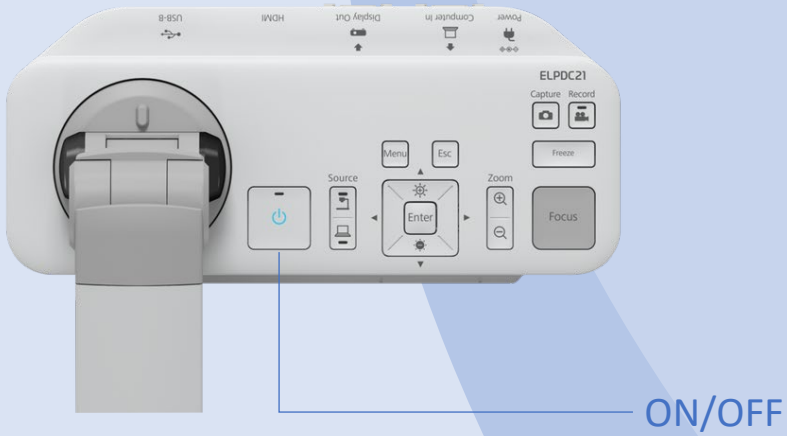

Press the LAMP SWITCH button to change the LED lamp status: bright, dim and off.

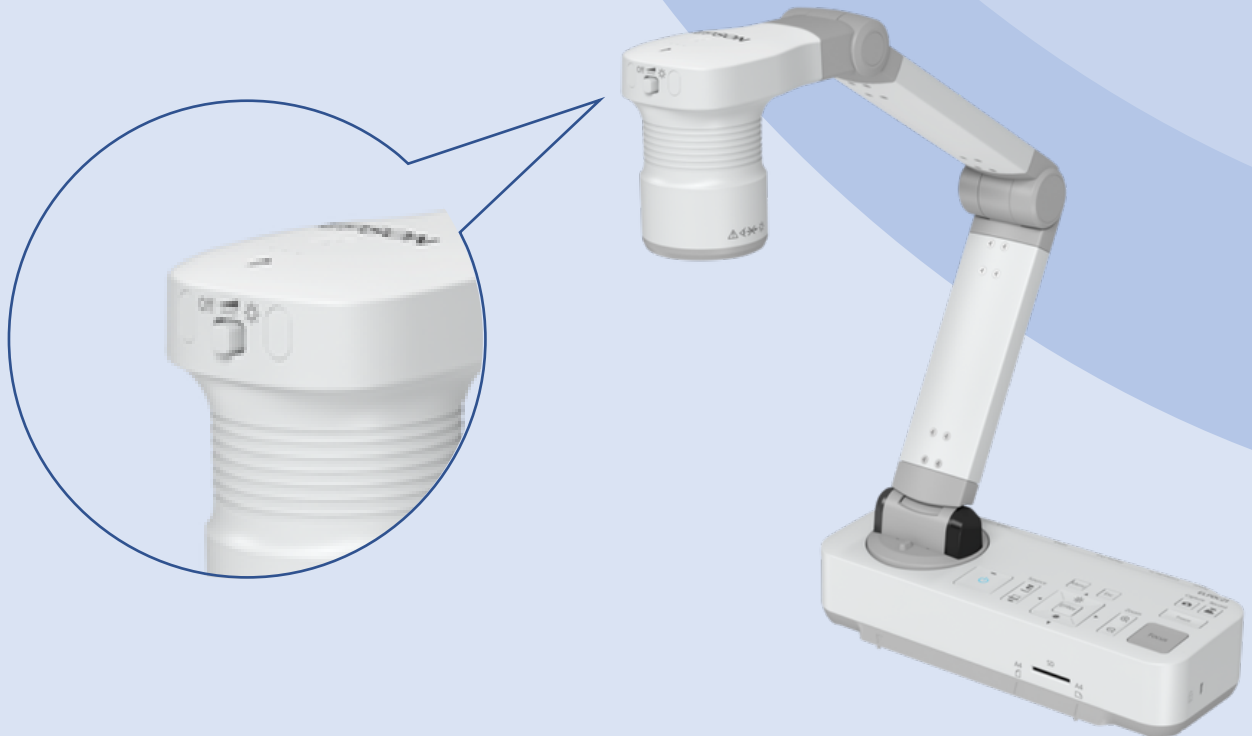

Press the FOCUS button to auto focus.



The display range of the document can be adjusted by pressing the ZOOM button to ZOOM IN and OUT.



CONTACT US

AV Support Hotline

Tel: 8822 2511

During semester period:

Mon - Thu, 08:00 - 17:45

Fri, 08:00 - 17:30

During recess period:

Mon - Thu, 09:00 - 13:00, 14:00 - 17:45

Fri, 09:00 - 13:00, 14:00 - 17:30

E-mail: css.classroom_support@um.edu.mo